QuoCut professional

W

WASTAGE SET UP

Wastage can be applied globally or on an individual basis.

1. Global setup of wastage percentage

Example – To change/modify the wastage for all metal summary items, select the following menu option:

Setup | Component Groups

- Highlight any summary item for METAL
- Select the Star-GRP button and all metal groups will be tagged
- Select the % Wastage button and put in the require percentage
- Repeat for other summary groups

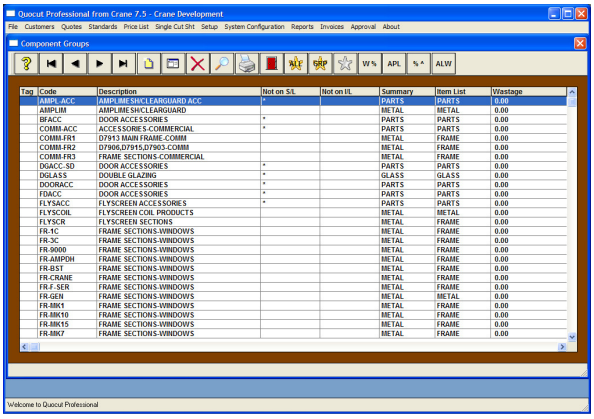

Note – make sure you select the silver star to untag all before exiting.

2. Individual setup of wastage percentage

To change/modify individual summary groups, select the following menu option:

Setup | Component Groups

- Highlight any summary item to be modified
- Select the View/Update button
- Update the % field
- Select SAVE
- Repeat for other summary groups