



## COMMERCIAL CODING

Bays are defined by the number of bays wide and then the number of bays high – example:

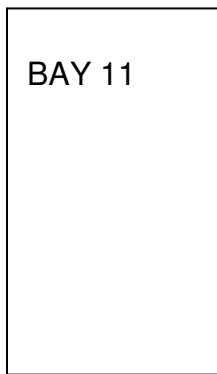


CF400-1-1

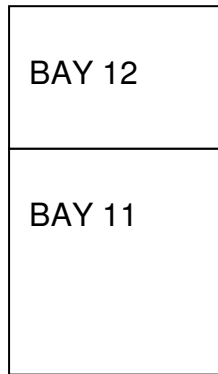


CF400-1-2




CF400-1-3

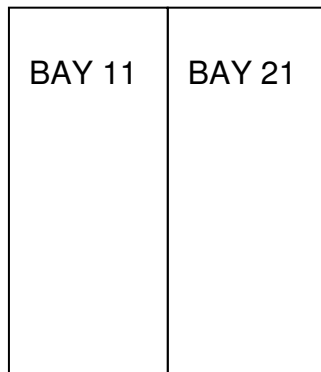


CF400-2-1

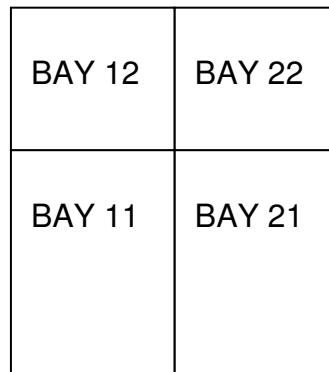


CF400-2-2

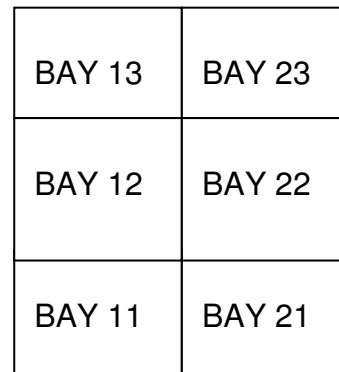


CF400-2-3

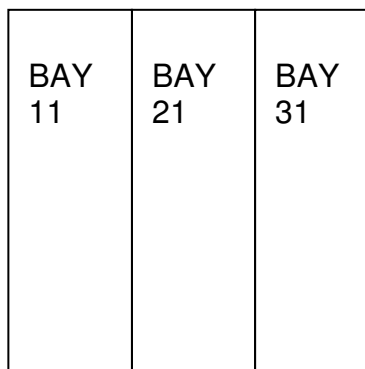

CF400-3-1

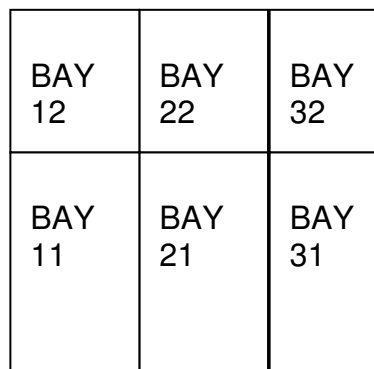

CF400-3-2

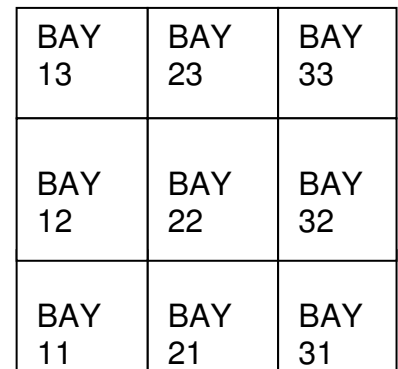

CF400-3-3